

Renault Mégane (manual) — what you need to know



Unlocking/locking the car

Use the Mobility Card to unlock and lock the car.

Starting the engine

Engage the clutch, foot brake, first gear and then press the ignition button.

Fuel tank cap

The fuel tank cap is at the rear on the passenger's side. Press on the fuel tank filler flap, then swing it open forwards.

Fuel

Petroleum diesel (not biodiesel)

Boot

To open the boot, pull the grip handle above the number plate and open the hatchback. You need to be registered.

Reverse gear

Reverse is at top left. To engage reverse, pull the ring around the gear shift upwards.

Tips and tricks

Before driving off

Give yourself plenty of time

Always reserve plenty of time to make sure you are able to return your Mobility vehicle at its station on time. Late returns will incur an additional charge.

Check the vehicle for damage

You are required to report any damage to the 24h Service Center on 0848 824 812 by your mobile telephone or by the on-board computer. You will not be charged for the call by the on-board computer.



When driving

On-board computer

Extending or shortening your reservation:
Press „Res +“ to extend your reservation or
„Res -“ to shorten your reservation.

Ending your reservation immediately:
Press the „ResEnde“ button.

After completing your journey

Back too soon?

If you are back at least 30 minutes before your reservation is scheduled to end, you can end the reservation immediately on the on-board computer and save money.

Check the fuel level!

Please note: The petrol tank must be at least one-third full when you hand the car back.

Left something in the car but already ended your reservation?

Not a problem – please contact the 24h Service Center on 0848 824 812.