

# Smart twinamic (Automatic) – what you need to know

---



## Unlocking/locking the vehicle

Use the Mobility Card to unlock and lock the vehicle.

## Ignition key

The ignition key is in the car's glovebox.

## Starting the engine

Insert the ignition key in the ignition, operate the brake pedal, place the gear selector in position P and turn the ignition key.

## Fuel tank cap

The fuel tank cap is on the right-hand side of the car to the rear. Swing the flap open and unscrew the cap anticlockwise.

## Fuel

Petrol: unleaded 95

## Boot

To open the boot, first open the rear window using the button on the handle, then operate the handle on the tailgate.



## Reverse gear

Operate the brake pedal, then press the button on the gear selector while moving the latter to position R.

# Tips and tricks

---

## Before driving off

### Give yourself plenty of time

Always reserve plenty of time to make sure you are able to return your Mobility vehicle at its station on time. Late returns will incur an additional charge.

### Check the vehicle for damage

You are required to report any damage to the 24h Service Center on 0848 824 812 by your mobile telephone or by the on-board computer. You will not be charged for the call by the on-board computer.



## When driving

### On-board computer

Extending or shortening your reservation:  
Press „Res +“ to extend your reservation or  
„Res -“ to shorten your reservation.

Ending your reservation immediately:  
Press the „ResEnde“ button.

## After completing your journey

### Back too soon?

If you are back at least 30 minutes before your reservation is scheduled to end, you can end the reservation immediately on the on-board computer and save money.

### Check the fuel level!

Please note: The petrol tank must be at least one-third full when you hand the car back.

### Left something in the car but already ended your reservation?

Not a problem – please contact the 24h Service Center on 0848 824 812.