

DRIVING INSTRUCTIONS – ELECTRIC VEHICLE – TESLA MODEL Y


1. Before driving

Vehicle checked for any damage before driving?

**In case of damage:
0848 824 812**

Disconnect the charge cable from the vehicle

Stop charging by selecting “Stop charging” and “Unlock” on the touch screen “1”. Remove the charge cable from the left-hand side of the vehicle. The cable remains at the charging station (and must be hung back in the holder). Close the flap of the charging socket by pressing it down slightly.

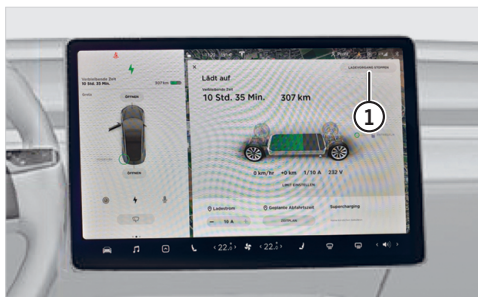

Driving

A. If you haven't done so already, log in at the checkpoint with the Mobility card.

To start the vehicle, depress the brake and engage a driving position.

If the message “Hold card to centre console” appears in the display, hold the Mobility card to the checkpoint again.

Please note: If too much time elapses between your first log-in with the card and setting off, hold the Mobility card up to the card reader again.

B. The vehicle is ready to drive (noiseless). Otherwise, repeat the process. The handbrake may have to be released.

C. Engage driving position “D” (normal forward gear) or “R” (reverse) as required, always keeping the brake depressed.



2. On the road

The motor of an electric car is virtually silent. When driving up to 30 km/h, however, driving sounds are artificially generated in the vicinity of the vehicle so as to warn pedestrians.




Range according to standard (WLTP)
Range under normal driving conditions

560 km
375 km

Please note: If the range is less than 20 km, the vehicle must be taken to a charging station immediately.

3. After completing your journey

Park the vehicle in reverse at the Mobility parking space – the charging socket is located on the left-hand side at the rear. Put the car in driving position P (Parking) "2" and switch off the car. Touch the charging icon "3" on the touch screen, then press OPEN CHARGING SOCKET. Charge flap "4" opens.

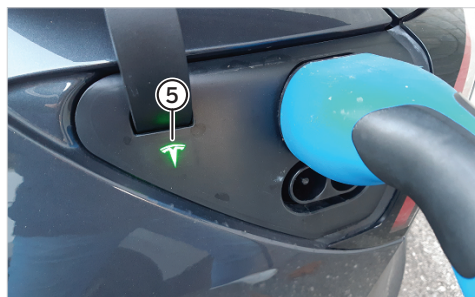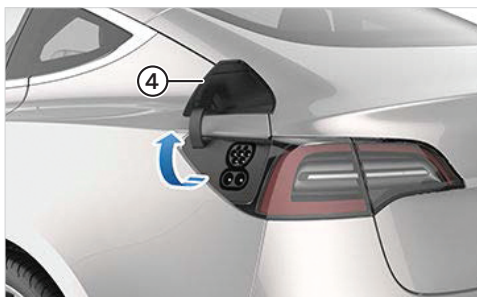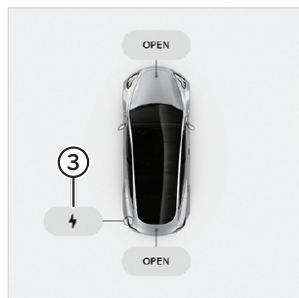

Take the charge cable from the charging station and plug into the upper vehicle charging socket. Lock the car with the Mobility card (hold card at checkpoint). Charging starts automatically, or if necessary you can activate the charging station using the "Home charging card". Check this on the LED "5" at the charging socket. This has to be flashing green if the car is being charged properly.

Have you removed all personal belongings from the vehicle?

Thanks for using Mobility and see you soon.


mobility

CHARGING INSTRUCTIONS – TESLA MODEL Y

1. On-the-go charging at a GOFAST fast-charging station

See here for details of the locations:

gofast.swiss/en/locations

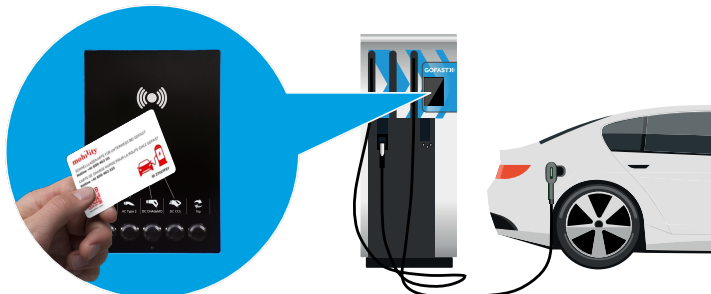

Put the car in driving position P (Parking) and switch off the car.

Touch the charging icon on the touch screen, then press OPEN CHARGING SOCKET. Charge flap "1" opens.


Proceed in the same way as in the section "After completing your journey".

Take the DC charging cable from the charging station and plug it into the vehicle charging sockets.

Start the charging process using the GOFAST charging card in the glove compartment of the vehicle. To

do this, follow the instructions on the charging station display.

In the event of problems, call the number on the charging station.

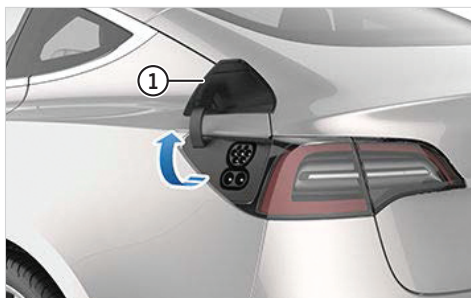

Range after 20 minutes of fast charging at maximum charging rate

~ 180 km

Time required for 80% charge

~ 30 mins

The vehicle has two sockets under the charge flap on the left:

- Upper socket = AC charging, e.g. at the Mobility station.
- Upper and lower socket combined = DC fast charging.

mobility

2. On-the-go charging at a Type 2 AC fast-charging station

Proceed as when charging at a fast-charging station. To charge at a Type 2 charging station, only the upper flap has to be removed. In some cases, the charge cables are permanently mounted on the charging station; otherwise use the charge cable in the luggage compartment of the vehicle. Don't forget to take this with you when you're finished charging.



Depending on the provider, the charging process is started automatically via an app or payment by credit card (the customer can charge Mobility if payment by credit card is required). The GOFAST charging card in the glove compartment of the vehicle can also be used. If necessary, contact the provider of the charging station.


If the charging process has been started correctly, LED "2" flashes green. Check this to make sure.

Range after 20 minutes of Type2 AC charging at maximum charging rate
Time required for 80% charge

~ 15 km
~ 5 hrs 30 mins

3. Additional charge cable

If there are no charge cables at a charging station, you will find one in the luggage compartment of the vehicle. This is compatible with charging stations which have a Type 2 plug. Don't forget to put it back in the luggage compartment after charging.

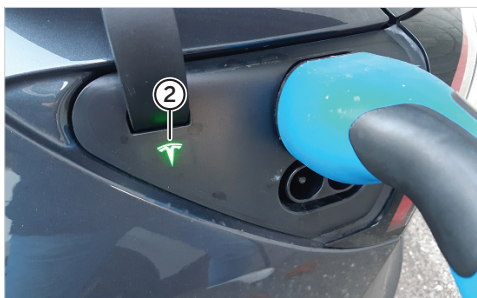

If the charging process has been started correctly, LED "2" flashes green. Check this to make sure.